

# REMOTE PRO


## PROGRAMMING INSTRUCTIONS



### BFT GENUINE REMOTES

#### DEIMOS SLIDER & THALIA CONTROL BOARDS

You control board has a LCD display with 3 buttons

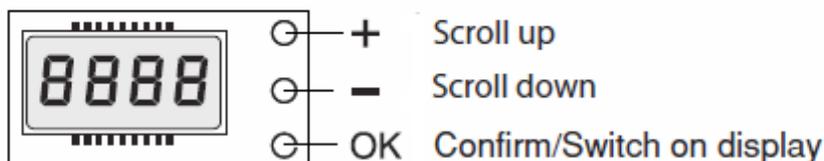

1. Press the OK button 4 times and the screen will display 'Paran'.
2. Press the middle button (-) twice and the screen will display 'Radio'.
3. Press the OK button twice and the screen will display 'Hidden Button'.
4. Press the top 2 buttons on the remotes simultaneously and the screen will display 'Release'.
5. Now release the 2 buttons.
6. Press any buttons on your new remote which you would like to operate your gate for 2 seconds.
7. Press the + and – buttons on the control board together 4 times to exit the programming mode.
8. Test your remote.

#### PROGRAMMING YOUR REMOTE TO YOUR NON-LED SCREEN CONTROL BOARD

1. Press S1 on the control board on your gate motor. The green light on the control board will turn on.
2. Press the 2 top buttons simultaneously. The green light will be solid.
3. Press the top left button. The LED light will flash rapidly for about 5 seconds.
4. Test your remote.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### PROGRAMMING YOUR NEW REMOTE VIA YOUR ORIGINAL REMOTE

1. Press and hold the 2 top buttons on your original working remote simultaneously until the red LED light turns on the remote.
2. Release the top buttons

Please note: If your gate begins moving during this process, stop the gate with your original remote and start again. The reason the gate is moving is because you are not pressing the 2 top buttons at the exact same time.

3. Press and hold the button that controls your gate until the red LED light turns on your remote, then release immediately.
4. Introduce your new remote within 10 seconds of pressing the last button on the existing remote.
5. Test your remote.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

