

# REMOTE PRO


## PROGRAMMING INSTRUCTIONS



### ECO


#### TRAVEL LIMIT SETTING

1. Press 'SET' button and hold until the LED displays figure '1'.
2. Then adjust the open position by pressing the 'up' button. Fine tuning 'up' or 'down' button to determine the final open position then press 'set' button turn into '2' automatically.
3. Adjust the close position by pressing the 'down' button. Fine tuning 'up' or 'down' button to determine the final close position then press 'set' button.
4. The opener will operate a cycle automatically to remember the limit positions set and the opening set the opening and losing force.

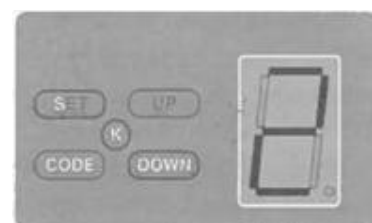

#### CODING THE REMOTE TO MOTOR

1. Press 'CODE' button and hold on until the LED dot displays.
2. Then press any button on the remote once, the dot will turn off; press the button on the remote again and the dot will fast flash, then the LED displays '| |'. The remote should now be set.

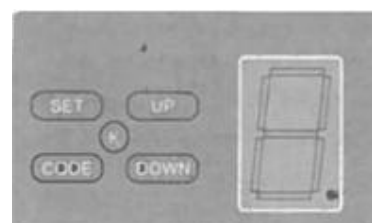

#### DELETING CODED REMOTES

1. Press 'CODE' button for more than 8 seconds until the LED displays 'C'. All stored remotes should now be deleted.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### SAFETY REVERSE FORCE ADJUSTMENT

1. Press 'SET' button and hold on until the LED displays '3'. This will put the unit into force adjustment mode.
2. Press 'UP' button to increase the force and 'DOWN' button to decrease the force.
3. The maximum force is 9 and the minimum is 1. Press 'SET' button to confirm.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

