


REMOTE PRO

PROGRAMMING INSTRUCTIONS



LETRON

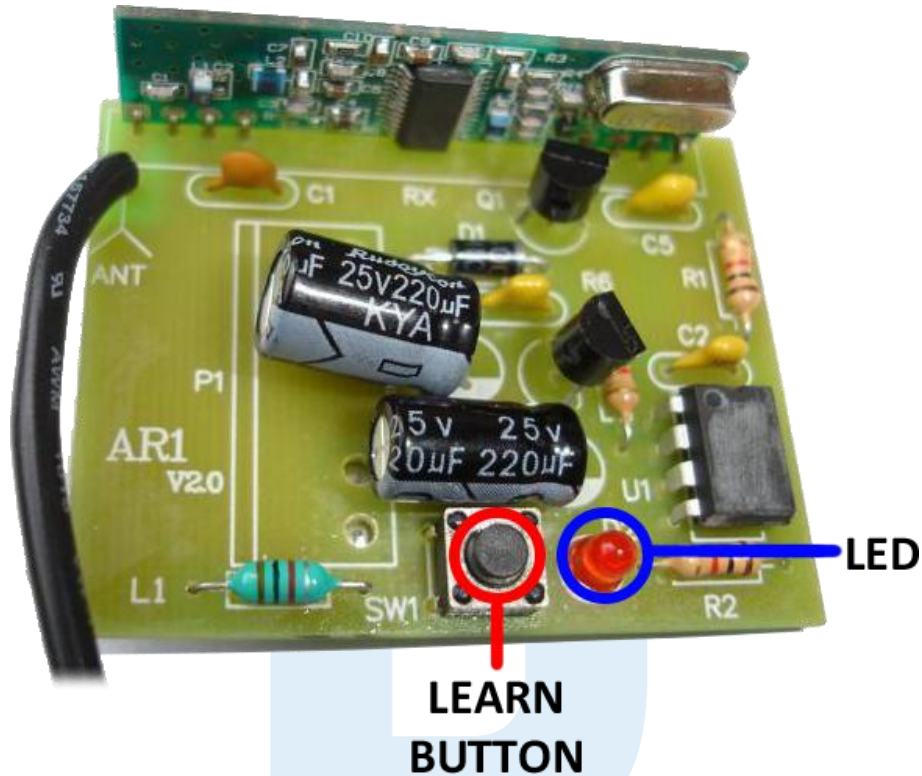

1. Press learn button on the Receiver for 1 second. The LED will illuminate.
2. Press desired button on handset that you wish to operate the door for 1 second.
3. Press the learn button on Receiver for 1 second again. The LED will turn off.
4. Repeat for any additional remotes.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

