

REMOTE PRO

PROGRAMMING INSTRUCTIONS



MYHOUSE

PROGRAMME YOUR NEW REMOTE TO YOUR MOTOR

1. Unscrew the screw on the side of the motor and carefully slide up the cover.
2. Press and hold button P1 on the motor which is the first button at the top for approximately 3 seconds until the red light on the motor illuminates.
3. Within 10 seconds press and hold any button on the new remote for approximately 2 seconds until the red light on the motor flashes.
4. If you are programming more than one remote, please repeat step 2 within the next 10 seconds.
5. Once finished coding all new remotes, the red light on the motor will go out and you can now test your remote.

Please note that depending on your motor's settings, the first button on the new remote will open, stop and close the door and the second button will open the door slightly for pedestrian access.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

