

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### MCKNIGHT

#### PROGRAMMING YOUR REMOTE INTO YOUR MCKNIGHT MOTOR

1. Push and hold the 'p' button until the number 7 flashes, then let go.
2. Then press and hold '+' until 7 glows strongly and release.
3. Press desired remote button twice, led 7 will flash again.
4. If more remotes are to be programmed, press and hold '+' until 7 glows and program handset, repeat for all additional handsets.
5. Press 'p' once and let go to end setup.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

