

REMOTE PRO

PROGRAMMING INSTRUCTIONS



SD03

PROGRAMMING YOUR NEW REMOTE TO YOU GARAGE MOTOR

This Opener can store up to 20 transmitter codes. When the memory is full the LED display will flash “Fu”.

PROGRAMMING REMOTES

1. Momentarily press the “Code” button. “Su” will be displayed on the LED Screen.
2. Momentarily press transmitter button.
3. Momentarily press the same button on the transmitter a second time. “Su” will flash on the LED Screen.
4. Change to “- -”. This indicates the transmitter code is now stored.
5. Repeat this procedure to code additional remotes.

DELETING REMOTES

To delete codes from the opener, press and hold the “Code” button for 8 seconds. “dL” will display on the LED screen indicating all transmitter codes have been deleted.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

