

REMOTE PRO

PROGRAMMING INSTRUCTIONS



SKY KEY / MAGIC KEY

1. Locate the learn button on the receiver. This will be attached to the motor.
2. Press and immediately release the learn button once. The LED will illuminate.
3. Press and hold a button on the new remote for 2 seconds then release. This will cause the LED on the receiver to either flash or go out.
4. Press and hold the same button on the remote again, then release.
5. After the receiver light has gone out. Test the remote.



WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

