

The following list is of all messages which the CB19 will show

"no result" NO RECORD  
"Gate is Closed"  
"Gate is Open"  
"Stopped (Opn)"  
"Stopped (Cls)"  
"Ped'n Access"  
"Stopped (Ped op)"  
"Stopped (Ped Cl)"  
"O/L (Ped Cl)"  
"O/L (Ped Op)"  
"M1 O/L (Opn)" GATE M1 OVERLOADED ON OPEN  
"M1 O/L (Cls)" GATE M1 OVERLOADED ON CLOSE  
"M1 Obst'd (Opn)" GATE M1 OBSTRUCTED ON OPEN  
"M1 Obst'd (Cls)" GATE M1 OBSTRUCTED ON CLOSE  
"Obst'd (Ped Op)" GATE OBSTRUCTED ON PED  
"Obst'd (Ped Cl)" GATE OBSTRUCTED ON UNPED  
"M2 O/L (Opn)" GATE M2 OVERLOADED ON OPEN  
"M2 O/L (Cls)" GATE M2 OVERLOADED ON CLOSE  
"M2 Obst'd (Opn)" GATE M2 OBSTRUCTED ON OPEN  
"M2 Obst'd (Cls)" GATE M2 OBSTRUCTED ON CLOSE  
"O/L (Opn)" GATE OVERLOADED ON OPEN  
"O/L (Cls)" GATE OVERLOADED ON CLOSE  
"Gate is Opening" GATE IS OPENING  
"Gate is Closing" GATE IS CLOSING  
"Reversing (M1)" GATE IS M1 REVERSING  
"Reversing (M2)" GATE IS M2 REVERSING  
"Reversing" GATE IS REVERSING  
"O/L Ped Cl" GATE WAIT FOR PED OL REV  
"Obst'd Ped Cl" GATE WAIT FOR PED REV  
"M1 O/L Cls" GATE WAIT FOR M1 OL REV  
"M1 Obst'd Cls" GATE\_WAIT\_FOR\_M1\_REV  
"M2 O/L Cls" GATE WAIT FOR M2 OL REV  
"M2 Obst'd Cls" GATE WAIT FOR M2 REV  
"Open Requested" GATE WAIT FOR OPEN  
"Ped Requested" GATE WAIT FOR REPED  
"O/L Cls" GATE WAIT FOR REV  
"Close Requested" GATE WAIT FOR CLOSE  
"Setup Aborted!" SET ABORT  
"Setup Complete!" SET COMPLETE  
"Start up" GATE IS STARTUP  
"Self reset flt" GATE SELF RESET  
"Manual reset flt" GATE SET RESET  
"Cont cfg" CONT MEM CLR  
"Full Cfg" FIRST MEM CLR  
"Rx cfg" RX MEM CLR  
"Battery Flat" FLAT BATTERY  
"Close Aborted" CLOSE ABORTED  
"Open Aborted" OPEN ABORTED  
"Wakeup from flat" GATE PWR ON FROM FLAT

"Power On" NORM PWRUP  
"Brown out Reset" BROWN OUT PWRUP  
"Controlled Reset" RESTART PWRUP  
"Watchdog Reset" WATCHDOG PWRUP  
"Unknown Reset" UNKNOWN PWRUP  
"Int Memory Flt" GATE INT MEMORY FAULT  
"Ext Memory Flt" GATE EXT MEMORY FAULT  
"Gate Overlap Flt" GATE OVERLAP FAULT  
"M1 Drive Flt" GATE M1 RELAY FAULT  
"M2 Drive Flt" GATE M2 RELAY FAULT  
"Supply Volt Flt" GATE AV35 HI FAULT  
"M1 I Sense Flt" GATE AVI M1 FAULT  
"M2 I sense Flt" GATE AVI M2 FAULT  
"M1 V Sense Flt" GATE AVV M1 FAULT  
"M2 V Sense Flt" GATE AVV M1 FAULT  
"LIMIT\_WIRE\_FLT" GATE LIMIT FAULT