

Wall Mounted Motors

1. Remove the faceplate of your wall mounted motor control panel. On the bottom centre of the grey faceplate will be a tiny slot that allows you to insert a flat screwdriver to remove the cover.
2. Once faceplate is removed, locate the radio *Learn/Code Set* button (indicated in the photo below by the small black button in the red circle) and push it once. A light will illuminate to indicate your motor is ready to accept a new remote.
3. Press any button on your new remote that you wish to operate the door once and release. The learning light on the motor control panel will blink to indicate the code has been learnt.
4. Push the *Learn/Code Set* button once and release.
5. Test the remote and place the faceplate back onto the motor control panel.



Ceiling Mounted Motors

1. Locate the *Radio Set/Code Set/Learn* hole. This is usually located on the rear of your motor.
2. Once located, insert a small pointed object into the hole and push the button once. A light will illuminate to indicate your motor is ready to accept a new remote.
3. Press any button on your new remote that you wish to operate the door once and release. The learning light on the motor will blink to indicate the code has been learnt.
4. Press the *Radio Set/Code Set/Learn* button once and release.
5. Test the remote.



WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

