


DURATRONIC™ SERIES

OPERATING INSTRUCTIONS

Coding is effected via the receiver board located inside the Gate Control Box - The Coding Link is next to the **WHITE WIRE** terminal *When not in use it sits on 1 prong only*

CODING REMOTES TO A RECEIVER

Connect power - Insert Link onto *TX Coding* prongs - transmit the button you want to activate the device on the new remote **LED** will flash once after coding new remote. *If the remote is already coded, the LED will flash twice If the memory is full, LED will flash three times*
Continue coding remotes and when complete, Remove *TX Coding Link*.

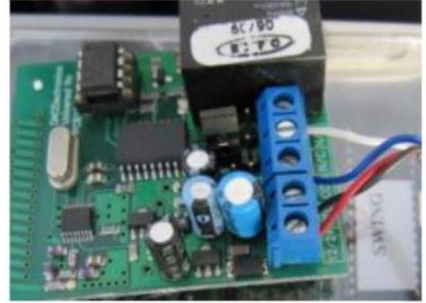

DELETE INDIVIDUAL CODES

Remove power - Reconnect power Insert Coding Link onto *Erase Memory* Prongs Within 10 seconds, transmit with previous coded remote
After remote has been erased, the LED will flash once indicating that the operation is complete - Remove Erase Memory Coding Link from Prongs
Points must be repeated every time a single remote is to be deleted.



DELETE ALL CODES

Remove power - Reconnect power
1 - Insert Coding Link onto *Erase Memory* Prongs Count LED flashes and when count reaches 4, remove *Erase Memory Coding Link*
2 - Insert *Erase Memory Coding Link* and count LED flashes When count reaches 2, remove *Erase Memory Coding Link*
3 - Insert *Erase Memory Coding Link* and count LED flashes When count reaches 4, remove *Erase Memory Coding Link*
All remotes are now erased from the receiver Remove *Erase Memory Coding Link*

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:
- Battery is hazardous: **NEVER** allow children near batteries.
- If battery is swallowed, immediately notify a doctor.
To reduce risk of fire, explosion or chemical burn:
- Replace **ONLY** with the same size and type battery
- **DO NOT** recharge, disassemble, heat above 100° C or incinerate
Battery will cause **SEVERE** or **FATAL** injuries in 2 hours or less if swallowed or placed inside any part of the body.

