

Other Models:

WIRELESS PROGRAMMING



Activate the opener only when door is in full view, free of obstruction and properly adjusted. No one should enter or leave garage while door is in motion. Do not allow children to operate push button(s) or remote(s). Do not allow children to play near the door


Your garage door opener receiver and transmitter are set to a matching code. If you purchase additional transmitters, the garage door opener must be programmed to accept the new remote code.

To program receiver to match additional remote control codes:

1. Press and hold down the transmitter button you wish to program to the opener (1).
2. Press and release the program button on the side of the opener (2).
3. When the opener light blinks, it has learned the code. If the light bulb is not installed, two clicks will be heard.

To erase all codes from motor unit memory or to deactivate any unwanted remote, first erase all codes:

Press and hold the program button (2) on opener until the learn indicator light goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each transmitter or keyless entry you wish to use.

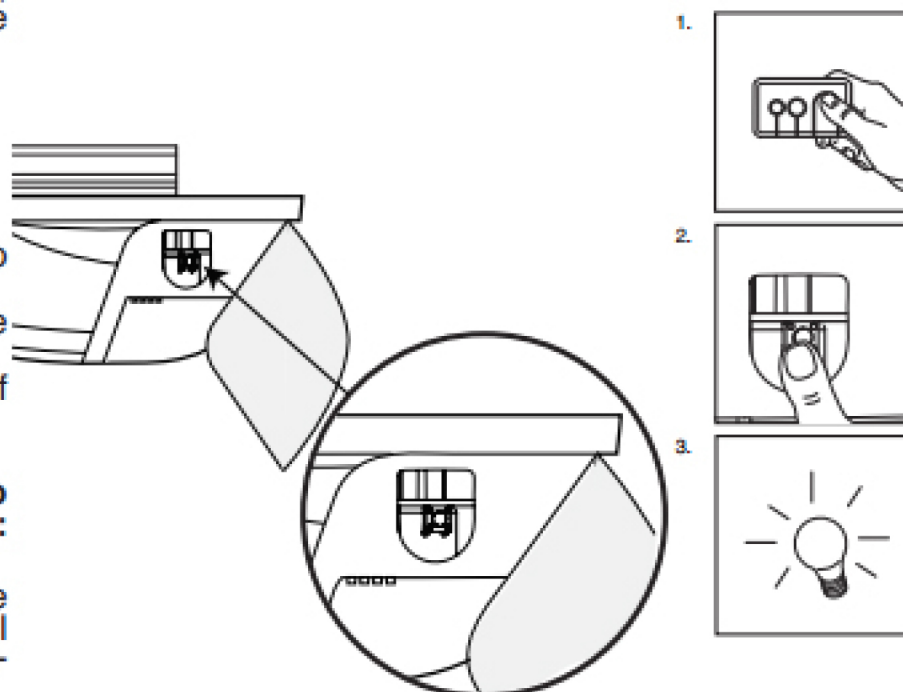

Model HE60R:

Program your Opener & Remote

Please note your remote control (s) have already been programmed into your operator.

Activate the opener only when door is in full view, free of obstruction and properly adjusted. No one should enter or leave garage whilst door is in motion. Do not allow children to operate push button(s) or remote(s). Do not allow children to play near the door.

ADDING remotes using the "LEARN" Button

- Press and release the **PURPLE** "learn" button on the opener. The orange indicator light will glow steadily for 30 seconds.
- Within 30 seconds, press the button on your remote control or (optional) wireless wall control.
- Release the button when the opener light blinks. It has learned the code.

Delete ALL Remote Control Codes

(Please note this deletes all remotes and codes).

Press and hold the **PURPLE** learn button until the orange indicator light goes out (approximately 9 sec).

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- Battery is hazardous: **NEVER** allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with the same size and type battery
- **DO NOT** recharge, disassemble, heat above 100° C or incinerate

Battery will cause **SEVERE** or **FATAL** injuries in 2 hours or less if swallowed or placed inside any part of the body.

