

Programme Wireless Keypad

1. Press (11) on the keypad.
2. Press the learn button on the Receiver, the LED light will blink.
3. Press *

Changing password

1. Press and hold 0 key and * at the exact same time.
2. Release both keys.
3. Press the factory password (11).
4. Press *
5. Enter new password (Maximum of eight numbers).
6. Press *
7. Re-enter the new password.
8. Finally, press *

How to use

1. Enter your new password.
2. Press *

WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

