

REMOTE PRO

PROGRAMMING INSTRUCTIONS



M802

1. Unscrew the small screw at the back of the new remote and remove the small tab from the battery.
2. Open your original remote. If you do not have one, please remove the tab at the back of your motor which is labelled 'code dip switches' or remove the light cover of the motor to find the switches.
3. Change the switches of the new remote to match either your old remote or your motor.
4. Close the remote and test.



WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

