

GTRTX REMOTE CODING PROCEDURE

Alarm GTR

No. Remote 5

Before entering this mode, make sure you have all remotes present that you wish to utilise with this alarm system, as the alarm automatically erases all remotes when you enter this mode.

1. Arm then disarm the alarm system. While the system is disarmed, open and close your drivers door (get inside the
2. vehicle), making sure the interior light is coming on as you open the door.
3. Within 30 seconds, turn the car ignition key from the off position to the ignition on position **8 times**.
10 seconds later, the blinkers will flash 8 times to confirm that you have entered the remote learning mode. Repeat
4. steps 1 & 2 if you do not receive the flashes.
5. Now press and hold the button 1 on the new remote you wish to learn in. The siren will beep once to confirm the code has been learnt. Repeat this step for up to 3 remotes. You can use this process to delete lost remote controls by learning in the same remotes in succession to replace each of the 3 memory locations so that the old remote code/s are erased.
6. The system will automatically exit the learning mode 20 seconds after the last press of a remote