



RCTX3-T REMOTE CODING PROCEDURE



Alarm JAGv2/RAv3

Programming Additional Remote Controls / Erasing Lost Remote Controls

Your JAGv3, JAGv2/RAv3 is supplied standard with 2 remote controls - Up to a maximum of 5 remotes can be used. To add a new remote to your alarm, simply follow the procedure below:

1. Turn the vehicle's ignition to on.

Immediately press and hold the  /  button on the original remote control until the indicators start to flash (approximately 4 seconds) and then release the button.

2. Immediately press and hold the  /  button on the new remote control for at least 4 seconds.
3. Turn the vehicle's ignition off.
4. The new remote control is now programmed into the immobiliser.

Erasing Lost Remote Controls

If you lose a remote control or perhaps have your car keys stolen, you can simply erase the lost/stolen remotes by repeating the procedure above 10 times. This will fill the system memory with remotes that only you have in your possession.

Learning in a new remote when no working remote is available

You may learn in a remote without having an already learnt-in remote. Please see "Overriding the Immobiliser" for more information.

Overriding the Immobiliser

Your alarm has been loaded with a randomly generated 5-digit override code. This feature enables the owner to override their immobiliser and start the vehicle in the case of lost or damaged remote controls. The customer must be made aware of this code, which is placed, on the front of this manual and the supplied override code card.

1. Enter the vehicle. If the alarm is armed the siren will sound - this may be turned off using your siren key but will not affect the procedure.
2. Ensure that the bonnet and boot are shut, your vehicles doors may be open or closed.
3. Turn the ignition from ON to OFF in a quick steady rhythm an equal number of times to the first PIN digit
4. Wait for the indicators to flash once. If the alarm is armed you will not be able to see the flash, instead watch for a flash on the red dash LED
5. Repeat steps 3 and 4 for the second PIN digit, remembering to wait to see the indicators or dash LED flash.
6. Repeat until all five PIN digits have been entered.
7. If the code has been entered correctly, the alarm will disarm. Start the vehicle within 38 seconds or the alarm will automatically immobilise, and the procedure will need to be repeated. If you make a mistake during code entry and the alarm does not disarm, please wait at least one minute before trying again.

NOTE: This procedure will have to be repeated each time you wish to start the vehicle without a working remote. To learn in a new remote when all remotes have been lost, repeat the above procedure with the door and the bonnet open. After the final pin digit has been entered the indicators will begin to flash - Immediately press the / button on the new remote control twice and hold this button on the second press for three seconds. The new remote should now be learnt to the system.

RCTX3-T REMOTE CODING PROCEDURE

Alarm RAM

SMS: To add remotes if all remotes are lost a combination of SMS and beeps can add a new remote.

1. Send the command "LEARN"

You will receive a SMS saying:

If you receive a SMS saying

"Unable to activate learn mode Ignition on" or

"Unable to activate learn mode System Armed"

Disarm the alarm and turn the ignition to the off position and repeat step 'A' again.

2. Within 15 seconds the alarm will begin to beep and flash the blinkers.
3. Press and hold down the Bottom button on a remote when the beeps begin keep holding until the beeps stop.
4. The new remote control is now programmed into the alarm.
5. Test that the remote now works.

With Remote:

To add a new transmitter to your alarm, simply follow the procedure below:

1. Turn the vehicle's ignition on.
2. Immediately press and hold the Bottom button on the Original remote control (Right Button if RCTX3-434) until the siren starts to beep (approximately 4 seconds) and then release the button.
3. Immediately press and hold the same (Bottom) button on the New remote control for at least 4 seconds.
4. Turn the vehicle's ignition off.
5. The new remote control is now programmed into the alarm.
6. Test to see if that remote works with the alarm

RCTX3-T REMOTE CODING PROCEDURE

Alarm JAG/RAv2
RES4601a

No. Remotes 5

To add a new remote to your alarm, simply follow the procedure below:

1. Turn the vehicle's ignition to on.
2. Immediately press and hold the Centre Button on the original remote control until the indicators start to flash (approximately 4 seconds) and then release the button.
3. Immediately press and hold the Centre Button on the new remote control until the indicators to stop flashing for at least 4 seconds.
4. Turn the vehicle's ignition off.
5. The new remote control is now programmed into the immobiliser.

Erasing Lost Remote Controls:

If you lose a remote control or perhaps have your car keys stolen, you can simply erase the lost/stolen remotes by repeating the procedure **above 6 times**. This will fill the system memory with remotes that only you have in your possession.

Learning In a Remote If all Remotes are Lost:

You may learn in a remote without having an already learnt-in remote. Simply perform the **Overriding the Immobiliser** procedure followed by the remote learning procedure above (from step 2).

Overriding the Immobiliser

This feature enables the owner to override their immobiliser in case they have lost their remote controls or they have damaged them. You have the secure choice of over 63,000 possible codes. Refer to Register 2 of the Programmable Feature section of this manual (page 8) on how to choose your own code. **This should be done upon installation.**

1. Open your driver's door and sit in the car. The siren will sound this is normal.
2. Now turn the ignition from on to off an equal number of times to your first code digit (this is a number you have chosen between 3 and
3. 255).
4. Wait for the blinkers to flash once. (This occurs whether you have entered the correct number or not). 4. Now turn the ignition from on to off an equal number of times to your second code digit (this is a number you have chosen between 3 and 255).
5. The immobiliser will now disarm. You must start your car within 38 seconds; otherwise, the immobiliser will automatically rearm.

NOTE: Unless a remote control is learnt in, if you turn the ignition off, you will have to repeat this

RCTX3-T REMOTE CODING PROCEDURE

Alarm RA

RCTX3-434 → RCTX3-T

To add a new transmitter to your alarm, simply follow the procedure below:

1. Turn the vehicle's ignition on.
2. Immediately press and hold the **RIGHT** button on the original remote control until the siren starts to beep (approximately 4 seconds) and then release the button.
3. Immediately press and hold the **BOTTOM** button on the new remote control for at least 4 seconds.
4. Turn the vehicle's ignition off.
5. The new remote control is now programmed into the alarm.



RCTX3-T REMOTE CODING PROCEDURE

Alarm RES98
(SA3749)
RCTX3-434 → RCTX3-T

To add a new transmitter to your immobiliser, simply follow the procedure below:

1. Turn the vehicle's ignition on.
2. Immediately press and hold the **RIGHT** button on the original remote control until the indicators start to flash (approximately 4 seconds) and then release the button.
3. Immediately press and hold the **BOTTOM** button on the new remote control for at least 4 seconds.
4. Turn the vehicle's ignition off.
5. The new remote control is now programmed into the immobiliser.



RCTX3-T REMOTE CODING PROCEDURE

Alarm RXPRO
RXPRO4
RXPROSOL

 
Enter Programming:

1. Mode Press and hold button 2 on the remote control
2. Connect to power
3. Keep holding button 2 until the display light stop scrolling, you are now in programming mode.

Adding new remote:




Press button 3 repeatedly until the channels lights indicate one of the output channels you wish to program. Select a channel that you wish to operate with a remote control i.e. not a channel that you wish to operate with a wireless detector.




Press button 2 until the feature lights are on as shown

 
Press button 1 to set the feature light(s) to flashing. NOTE: By default the feature light(s) will be flashing, if not press button 1 to set to flashing.



 Press button 2 repeatedly until the feature lights are off as shown.



 Press and hold button 1 until the channel lights(s) begin to flash



Immediately press button 1 repeatedly on the new remote control you wish to learn in until the channel light(s) stop flashing.



Press and hold button 2 on the new remote control until the lights start scrolling. The new remote control has now been learnt in.