


# ATA KPX7v2 Instructions


Getting your motor into programming mode. You will either have a mode or code set button as per below. Please follow below instructions to get your door into programming mode.

## Option 1

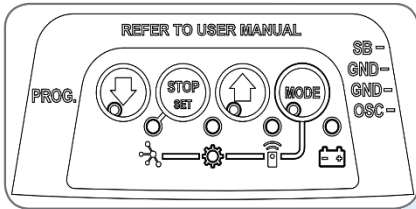

OR

## Option 2

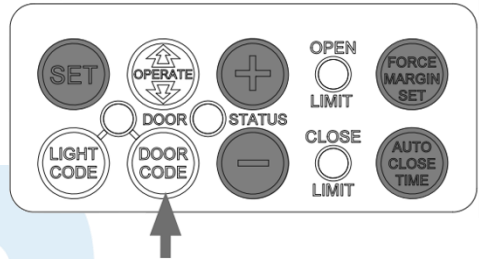

### If option 1,

1. Press and release the mode button repeatedly until the transmitter LED is lit.
2. Press and hold the blue down arrow button.
3. While still holding the down arrow, press and hold button number 1 for 2 seconds
4. Press and hold button number 1 for 2 seconds again
5. Press and release the 'Mode' button

### If option 2,

1. Press and hold the "Door Code" button.
2. Press and hold button number 1 for 2 seconds.
3. Press and hold button number 1 for 2 seconds again.

## Creating your own PIN

1. Press and hold the "FCN" button. The keypad will beep and flash to indicate that it is in learning mode. Release the button.
2. Enter in your new 4-digit user PIN code and press the "FCN" button.
3. Re-enter the same 4-digit user PIN code and press the "FCN" button.
4. The keypad will flash and beep to indicate that it is exiting learning mode.