

Setting the pin-code

1. Press ◀ button for channel 1 until you hear the long beep, the signal light in the upper left corner flashes
2. Press button 1 twice, then press the ◀ button to confirm
 - a. Long beep & the signal light stop flash means the password is correct
 - b. Rapid beep means this step was done incorrectly and exit password update (start from step 1)
3. Enter your new pin-code with 1-8 digits, press ◀ button to confirm, the signal light in the lower left corner flashes
 - a. Rapid short beep means the password exceeds 8 digits and exit password update (start from step 1)
4. Enter the new pin-code again, then press ◀ button to confirm
 - a. Long beep means the same password twice
 - b. Rapid short beep means different password twice and exit password update (start from step 1)

Programming the keypad to your motor

This will program the same way your remote programs. It is best to refer to your motor manual for the specific programming procedure. The only difference will be when the procedure asks you to press a button on your new remote you will be entering your pin-code and pressing the ◀ button.

Generally (for most models), you will press the learn button once and immediately release. Then enter your pin-code and press the ◀ button twice.

WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

