


CSI Classic Remote Coding Instructions

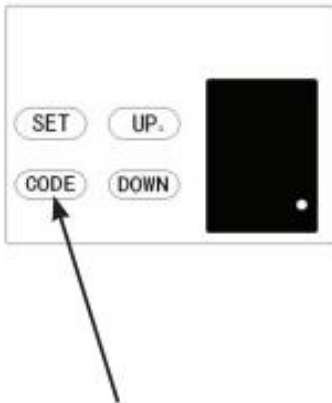


Programming Hand Transmitters

NOTE: Hand transmitters that are supplied with the door opener are pre-programmed.

1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, pause for 2 seconds, then press the same button on the hand transmitter again for 2 seconds.

The dot on the display will flash to confirm the code, then turn off. Repeat the process for additional remotes that need to be stored.

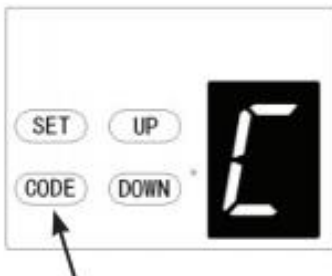

Deleting Stored Hand Transmitters

1. Press and hold CODE button until a C is indicated on the display. All stored remotes will be deleted.