

DEA ZIGGY GT2 REMOTE

CODING INSTRUCTIONS

RECEIVER WITH NO LCD SCREEN


1. Open the casing of your receiver box. it can be found next to your motor.
2. Press the programming button on the circuit board of the receiver and then let it go (button ENR, MEMO, PROG, or RESET, depending on the model).
3. The LED light on the receiver lights up or blinks.
4. Press a button on your new remote control for 1 second.
5. Let the button go. The LED light on the receiver goes out immediately or in the following 10 seconds depending on the model.
6. Your new remote control is programmed.

Repeat for more remotes.

RECEIVER WITH A DIGITAL SCREEN

1. Open the casing of your receiver box. It can be found next to your motor.
2. Press the buttons + or — on the receiver circuit board until you see the entry P005 on the digital screen.
3. Press OK. The LED lights up.
4. Press a button on your new remote control for 1 second
5. Wait 10 seconds.
6. Your new remote control is programmed.

Repeat for more remotes.

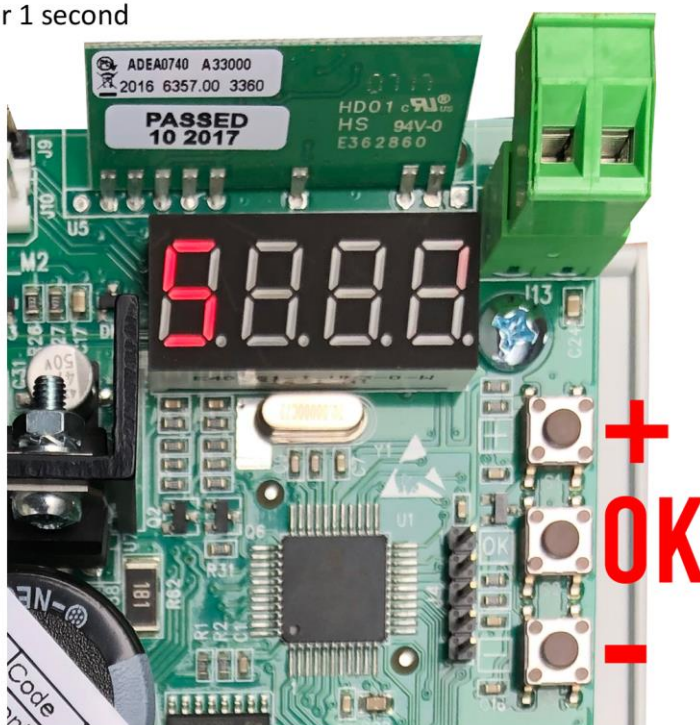

DELETING REMOTES

Press the programming button on the circuit board of the receiver for 8 to 10 seconds and then let it go (button ENR, MEMO, PROG, or RESET, depending on the model). All remotes are now deleted.

WARNING

To prevent possible SERIOUS INJURY or DEATH:

- Battery is hazardous: NEVER allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace ONLY with the same size and type battery
 - DO NOT recharge, disassemble, heat above 100° C or incinerate
- Battery will cause SEVERE or FATAL injuries in 2 hours or less if swallowed or placed inside any part of the body.

