

Coding Instructions

1. Open the original working remote (may be located under the battery cover or you may need to remove the screws at the back of the remote).
Please note: If you do not have an original remote you will need to locate the DIP switches on the motor or receiver.
2. Open the new remote (may be located under the battery cover or you may need to remove the screws at the back of the remote).
3. Change the DIP switches in the new remote, by moving these up or down to match the switches in either your old remote or your motor.
4. Close the remotes and test.

www.remotepro.com.au

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- Battery is hazardous: **NEVER** allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with the same size and type battery
 - **DO NOT** recharge, disassemble, heat above 100° C or incinerate
- Battery will cause **SEVERE** or **FATAL** injuries in 2 hours or less if swallowed or placed inside any part of the body.

