

REMOTE PRO

PROGRAMMING INSTRUCTIONS



DITEC

PROGRAMMING A REMOTE VIA AN EXISTING REMOTE

1. Be within 3 metres of your gate or door.
2. Take a remote that has already been coded to the gate and test to ensure it is operating the motor.
3. Locate the 'secret switch' position. On the older remotes this is indicated by a small hole next to the DITEC name. On newer remotes the hole is in the centre of the buttons.
4. Using a pin or paperclip push the secret switch for 5 seconds until the red light on the remote lights.
5. Within 10 Seconds. Press the button on the NEW REMOTE you want to operate the gate or door ONCE ONLY.
6. Wait for 10 seconds for receiver to reset and test.

PROGRAMMING A REMOTE DIRECTLY THROUGH TO A RECEIVER

1. Open the control box and locate the receiver. Ensure that jumper JR6 on the receiver board is on.
2. Press the black PRG button for 5 seconds. Press the button on the new remote you wish to activate the device for 1 second.
3. Wait for 10 seconds for receiver to reset and test. If coding fails, this could be because the receiver MEMORY is full. DELETE all remotes and start again.

DELETING CODES FROM MEMORY

1. Press the little black program button (inside MOTOR BOX) until seeing the red light flashing slowly and release.
2. Press the button again until you see the light flashing fast. Then release.
3. Wait 10 seconds, then test.
4. Repeat for the garage door if fitted. The program button for garage should be in a ADD-ON receiver.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

