

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### ECO RECEIVER

#### TURN OFF POWER OF MOTOR FROM THE POWER POINT.

1. Open the motor cover and view the diagram below and ensure that it matches with the inside of your motor.
2. Connect the black receiver cable to the PB.
3. Connect the blue receiver cable to GND.
4. Connect the brown receiver cable to +24V.
5. Turn power back on and ensure the receiver powers up.
6. Your two new remotes have been pre-programmed to the receiver. Press button 1 on your new remote to ensure it can operate the door.



#### CODING NEW REMOTES

1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
2. Press and hold any button on your new remote until the LED flashes 3 times.
3. The remote is now coded, please test the remote to ensure it can operate the motor.
4. If you have more than one new remote, please repeat steps 1-3.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

