

REMOTE PRO

PROGRAMMING INSTRUCTIONS



ELSEMA

1. Remove your original remotes battery cover to reveal 12 little switches.
2. Unscrew the back of the new remote to reveal the same 12 switches.
3. Change the new remotes switches to match the old remote.
4. Close both remotes and test.

If the remotes does not operate the door after copying the switches, please try the switches on the new remote in reverse. For example: position of switch 12 on the old remote will be the position of switch 1 on the new remote, position of switch 11 on the old remote will be the position of switch 2 on the new remote etc.



WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

