

REMOTE PRO

PROGRAMMING INSTRUCTIONS



GENESIS & GENESIS OPTIMA

PROGRAMMING YOUR NEW REMOTES TO YOUR MOTOR

The following instructions demonstrate how to program a new or additional Gliderol handset to suit your existing Genesis or Genesis Optima garage door operator.

Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. Please refer to your Owners Manual for further information on this process.

1. Press and release the 'Code' button. The '-.-.' will become visible on the display as shown below.



2. Press and hold the desired button on your remote that you would like to operate your door until the dots shown on the display flash.
3. To program a single remote to operate multiple doors (up to 3), simply repeat these steps and select a different button for operation. Genesis openers can be programmed to be used by up to 15 remotes.
4. Test your new remote.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

