Open the original working remote (may be located under the battery cover or you may need to remove the screws at the back of the remote).

Please note: If you do not have an original remote you will need to locate the DIP switches on the motor or receiver.

- 2. Open the new remote (may be located under the battery cover or you may need to remove the screws at the back of the remote).
- 3. Change the DIP switches in the new remote, by moving these up or down to match the switches in either your old remote or your motor.
- Close the remotes and test.

## WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



