

## LOCATING THE LEARN BUTTON

On overhead door openers:

- With five exposed terminal screws at the rear
  - Remove the small black cover to the right of the terminal screws
  - Learn is the **RED** button under the black cover
- Learn is the **RED** button under the black cover
  - Learn is the **RED** button under the black cover
  - Find the small button marked "Learn"
- With four covered terminal screws at the rear, and a Merlin wired wall switch
  - The small button on the Merlin wall switch is the Learn button

On roller door openers:

- Single small square **RED** button on the front
  - Remove the lamp cover; remove the small black cover to the left of the lamp holder
  - Learn button is the **RED** button under the black cover
- Large **RED** or **GREEN** push switch on front
  - Remove the **RED** or **GREEN** control panel cover
  - Find the small button marked "Learn"
- Large **RED** or **GREEN** push switch on front and a Merlin wired wall switch
  - The small button on the Merlin wall switch is the Learn button

On other receivers:

- Dark grey boxed receiver with a large round **GREEN** button
  - The Learn button is the small **DARK GREY** button inside the **GREEN** button
- Gate receiver cards
  - The Learn button is the tact switch on the PCB marked "Learn"
- Others
  - See your receiver's user guide, or inspect and find a button marked "Learn"

## PROGRAMMING THE NEW REMOTE TO THE OPENER OR RECEIVER

1. Press and hold the Learn button for 1 to 2 seconds.
2. Press the desired button on the remote control which you want to operate the door **twice**.

Programming the remote to control the lamp on your opener (if fitted):

1. Press the desired button for the secondary function.
2. Press and hold the Learn button for 1-2 seconds.
3. Press the desired remove control button once for the main function (open door).
4. Press the desired remove control button once for the secondary function (control lamp).

### WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

