


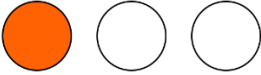


# Nova Keypad Instructions

1. Remove the back casing of the keypad by inserting a small flat screwdriver at the base of the keypad

Instructions	Indicator LEDs
Press the * button followed by the default master code (1 2 3 4). Press the * again.	
Press the '0' button and the '#' button	
Press on button number 1 followed by the #	
Enter your 4-digit pin, press #	
<b>Quick guide</b>  *1 2 3 4* 0 # 1 # NEW PIN #	

Please note if no action is taking in 5s, the keypad will time out and the lights will turn off, the keypad will beep once, please start from step 1.

## Programming your new remote to your motor

2. Press the 'Go' button once and release.
3. Press the 'Go' button again for 2 seconds.
4. Press the top arrow button until you see "Remote Controls (TX)" on the screen.
5. Press the 'Go' button once, you will see "Add Remote".
6. Press the 'Go' button again, you will see "Select Function Trigger Gate".
7. Press "Go" button again, you will see "Time Bar Remote?".

8. Press “Go” button again, you will see “Press Remote Button”.
9. Enter your new PIN
10. Press a button on your new remote for 2 seconds and release. The screen will display “Success”.
11. Press the Exit button twice to exit programming mode.
12. Test your new keypad by entering your code followed by the #.

## **WARNING**

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

