

Programming a new remote

1. Press and immediately release the Code Set button on your wall control panel once and a light will illuminate next to the Code Set button
2. Press either of the top two buttons (lock or unlock) on the new remote and the Code Set light will go out
3. Press either of the top two buttons on the remote and the door will operate.



WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

