


# OIL-HYDRAULIC BARRIER FOR TRAFFIC CONTROL



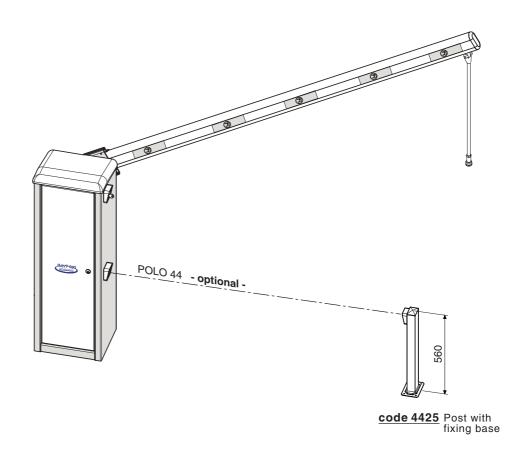



### INSTRUCTIONS FOR THE INSTALLATION OF THE TRAFFIC BARRIER

FOR A PERFECT APPLICATION AND CORRECT PERFORMANCE OF **BAYT 980** ITS IS RECOMMENDED TO KEEP TO THE INSTRUCTIONS AND DIAGRAMS IN THIS MANUAL **IMPORTANT**: THE COMPLETE INSTALLATION IS TO BE CARRIED OUT BY QUALIFIED TECHNICIANS IN COMPLIANCE WITH THE NORMS EN 12453- EN 12445, AND THE MACHINE DIRECTIVE 98/37/EC. A RISK ANALYSIS IS REQUIRED IN COMPLIANCE WITH THE EXISTING SAFETY NORMS.

## **GENERAL FEATURES:**'

"Bayt 980" is an oil-hydraulic automation fitted with an aluminium beam to provide a moving barrier where traffic is required to be controlled or stopped from accesses, roads or properties, mainly industrial.

The mechanism is enclosed in a housing cabinet made of metal sheet, rust treated, paint finishing; a stainless steel option is available on request. It includes the hydraulic assembly, the return spring to balance the beam movements and the electronic control unit fitted inside a box. A power cut off switch is fitted to the door allowing safe access to the mechanism for maintenance or service.

Three versions are available, depending on the application requirements. A slow down device is incorporated in both up and down cycles of the beam, adjustable in the down cycle to decrease speed over the last degrees of the beam rotation.

The motor pump unit and the oil-hydraulic actuator are incorporated into a single, compact block.

### PRELIMINARY INSPECTIONS


Before installing bayt 980 it is recommended to make sure that:

- The surface of the site is adequate to take the automation
- No obstacles interfere with the movements of the beam
- The excavation required to lay the electric cables of the automation does not run into underground services
- A Risk analysis is to be carried out as indicated in the book safety Norms. The installation must be in full compliance with the existing safety regulations.

# INSTALLATION OF THE BARRIER BAYT 980

### **BAYT 980 RIGHT- AND LEFT-HAND UNITS: IDENTIFICATION**

Bayt 980 is designed as a handed product. It can be right- or left-handed, viewed from outside: in both cases the inner configuration is such that the hydraulic actuator always pushes the beam to rise in the opening cycle (Pic.1)

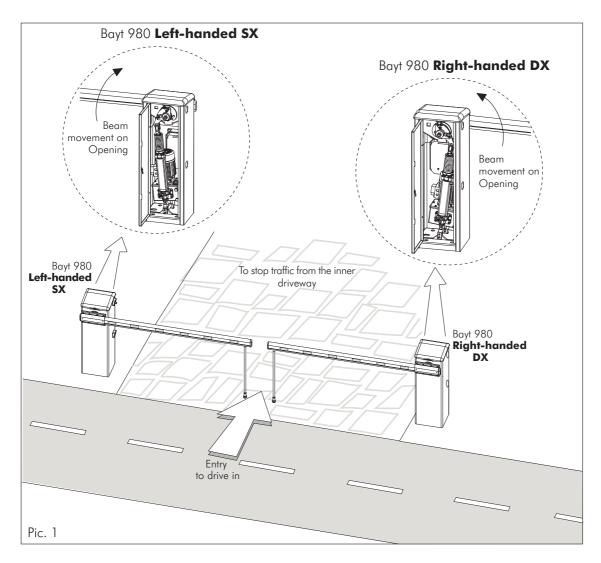


### **INSTALLATION OF THE FIXING BASE PLATE "A"**

- The first operation is to set the **Fixing base plate "A"** (Pic 2), in a perfectly levelled concrete foundation. The longer side of the plate is where the door is fitted in the Bayt 980 housing. Before concreting, one or two <u>tubes</u>, having a diametre of 30 mm, are to be provided for the electric cables (mains supply, commanding and safety accessories) as required (Pic. 2).

**Important:** Before concreting the fixing base plate screw the four bolts in so that the threads protrude completely.


**Important:** The base plate is required to be perfectly levelled in both levels. This can be achieved with the help of a spirit level as in the picture and must be **di 5mm higher** than the road pavement level (Pic.2).

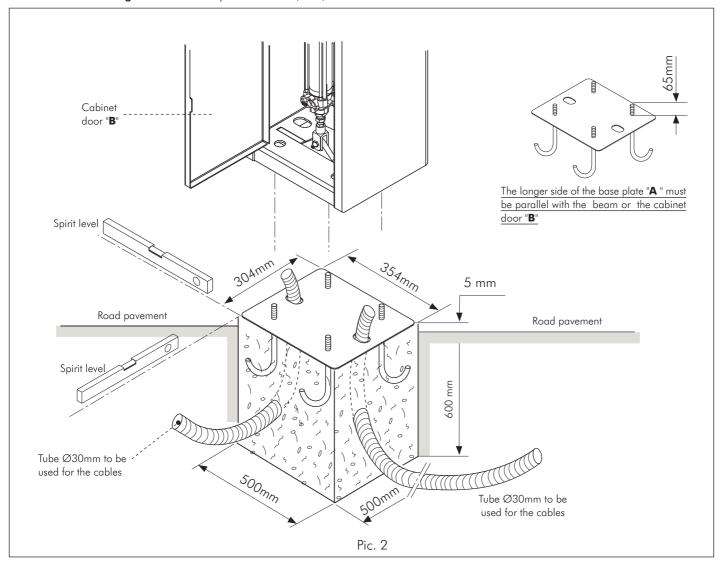

### MOUNTING THE HOUSING ON TO THE BASE PLATE "A"

Once **the Fixing Base Plate "A"** has firmly set in the concrete foundation, the **Housing** of Bayt 980 can be mounted on to it and fixed to the protruding bolts (Pic.3) by means of the four **M14 Hexagonal Nuts** and the respective **Washers** (Pic.3)

**IMPORTANT:** When mounting the housing on to the fixing base plate "**A**" make sure that the cable leading tube is properly fitted inside the housing.

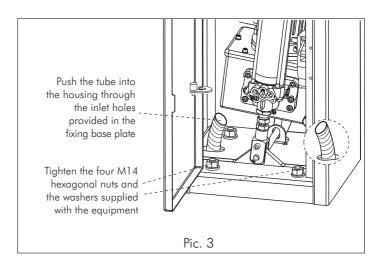


## ELECTRICAL CONNECTIONS TO THE CONTROL PANEL FLPRO 10 PLUS

Before starting the electrical connections carefully read the electrical diagrams here enclosed (Pic.4, Pic.5 and Pic.6). **IMPORTANT:** Do not forget to set the voltage switch on the Elpro 10 Plus PCB on to 230V.


- **Voltage supply, electric motor, lamp**: Use 1.5mm<sup>2</sup> section wires over distances of 50m maximum. For longer distances use electric wires having a suitable square section according to the rules of good technical installation. For all the external accessories to the control panel it is possible to use 1 mm<sup>2</sup> section wires.
- Photocells, Push buttons, key-switches and accessories: Use 1 mm<sup>2</sup> section wires.

**IMPORTANT:** Connect the whole installation to the <u>earth</u> terminal "**M**" fitted onto the mains cut off switch (Pic.4). Also, it is recommended to carry out a risk analysis of the entire installation in compliance with EN 12445 and EN 12453 Norms, as specified in the book "Safety Norms".

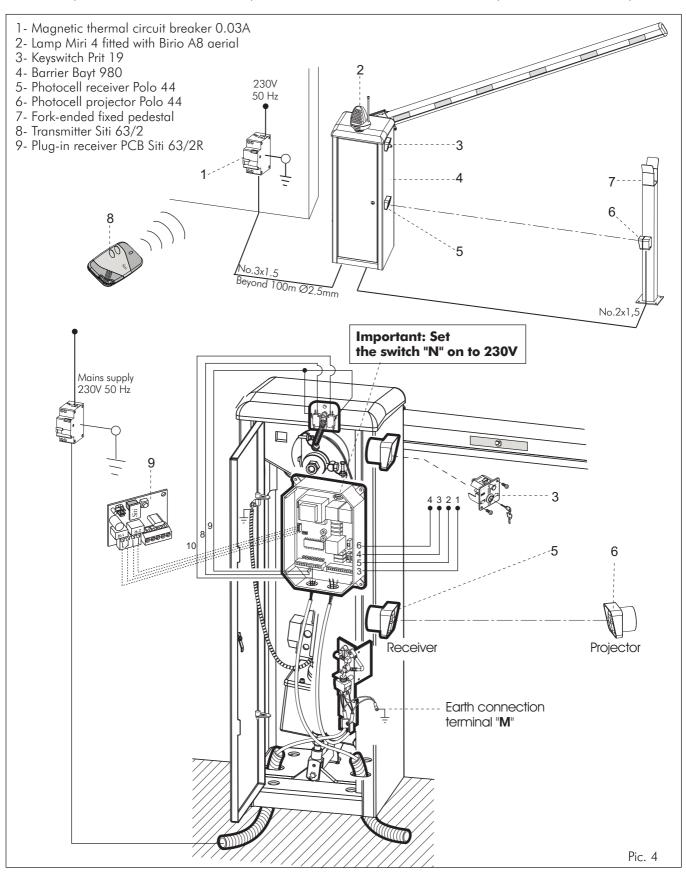





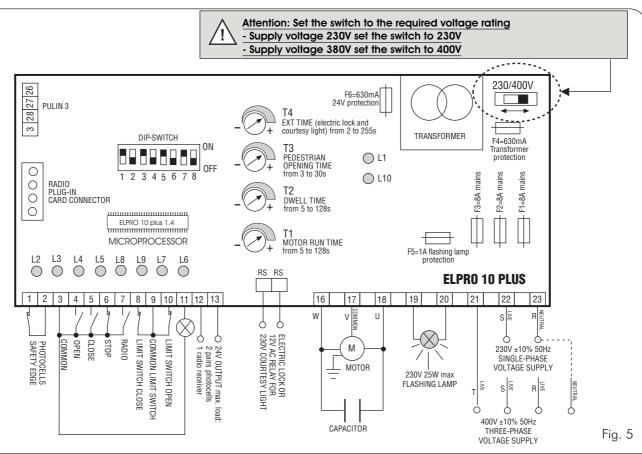

**General description:** the electronic control panel Elpro 10 Plus, new generation, is designed to operate sliding gates. Power supply is 230/400V single-phase and three-phase. Built in full compliance with BT 93/68/CE Low Voltage and EMC 93/68/CE Electro-Magnetic Compatibility Regulations. Fitting operations are recommended by a qualified technician in conformity to the existing safety standards. The manufacturing company declines any responsability for incorrect handling and application; also, it reserves the right to change or update the control panel any time.

Failure to follow installation regalations may result in serious damage to property and persons.



### **PLEASE NOTE:**

- The control panel must be installed in a sheltered, dry place, inside the box provided with it.
- Make sure that the power supply to the electronic programmer is 230V  $\pm10\%$  or 400V  $\pm10\%$
- Make sure that the power supply to the Electric Motor is 230V ±10% or 400 V ±10%
- For distances of over 50 metres we recommend using electric cables with bigger sections.
- Fit the mains to the control panel with a 0.03A high performance circuit breaker.
- Use 1.5 mm<sup>2</sup> section wires for voltage supply, electric motor and flashing lamp. Maximum recommended distance 50 m.Use 1 mm<sup>2</sup> section wires for limit switches, photocells, push-buttons/key-switch and accessories.

OFF

- Bridge terminals 1 and 2 if no photocells are required.
- Bridge terminals 3 and 6 if no key- or push-button switches are required.
- N.W: To fit extra accessories such as lights, CCTV etc. use only solid state relays to prevent damages to the microprocessor.

3 4 5 6 7 8

### Dip-Switch:

- 1= ON. Photocells. Stop while opening
- 2= ON. Radio. No reversing while opening
- 3= ON. Automatic closing
- 4= ON. Preflashing activated
- 5= ON. Radio. Step by step. Stop in between
- 6= ON. Dead Man Control (Dip 4=OFF and Dip 3=OFF)
- 7= ON. No lamp on during dwell time
- 8= OFF. No function


# In case of failure of the panel: - Make sure that the power sur is 230V ±10% or 400V ±10%

- Make sure that the power supply to the electronic programmer is 230V  $\pm 10\%$  or 400V  $\pm 10\%$
- Make sure that the power supply to the Electric Motor is 230V  $\pm 10\%$  or 400 V  $\pm 10\%$
- Check fuses
- Check photocells if contacts are normally closed
- Check all NC contacts
- Check that no voltage drop has occurred from the control panel to the electric motor

### **Led Status Indication:**

- L1= 230V 50Hz power supply. Alight
- L2= Photocells, if obstructed light goes off
- L3= Open. Alight whenever an Open pulse is given
- L4= Close. Alight whenever a Close pulse is given
- L5= Stop. It goes off on pulsing Stop
- L6= Radio. It goes on by pressing a transmitter button
- L7= Gate Status; it flashes on gate opening
- L8= Limit switch Close; off when gate is closed
- L9= Limit switch Open; off when gate is open
- L10= It stays on for a time equal to the time set on T4




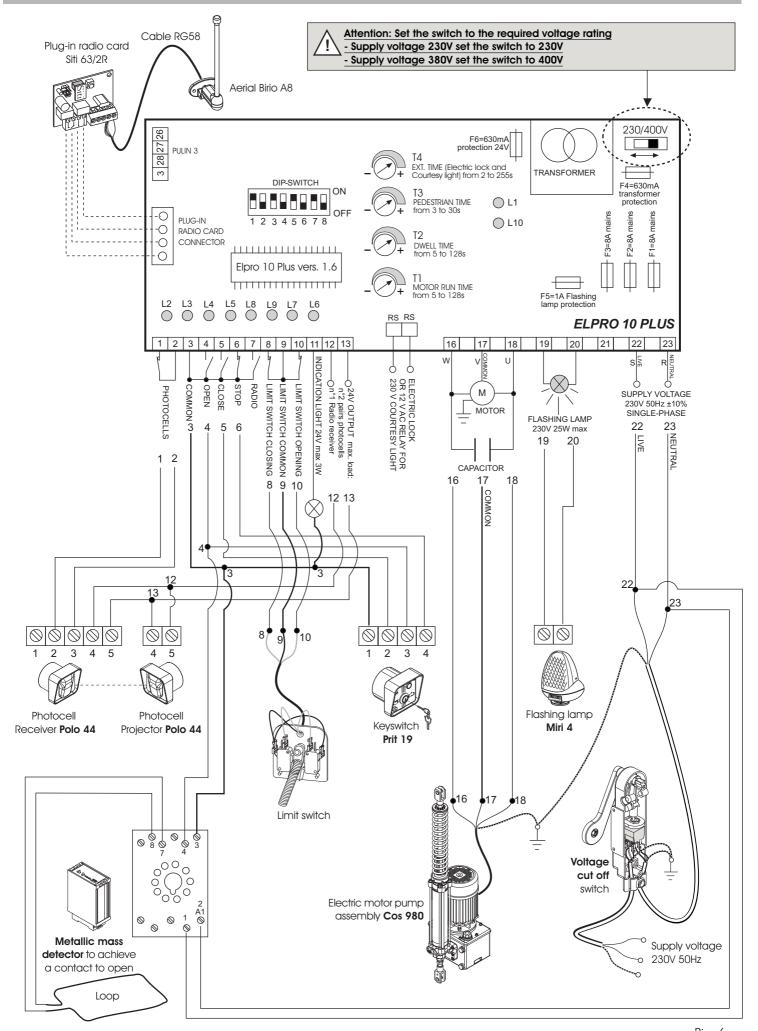

page 6 Pic. 6

### OVERRIDE FOR MANUAL OPERATIONS OF THE BEAM

In events like power failure, the Bayt 980 mechanism can be "overridden" allowing the beam to be operated by hand. A special release spanner "Q" is provided with the barrier to operate the release ie. override the valve "V" positioned in the front side of the valve block, between the safety pressure valves (Pic.7).

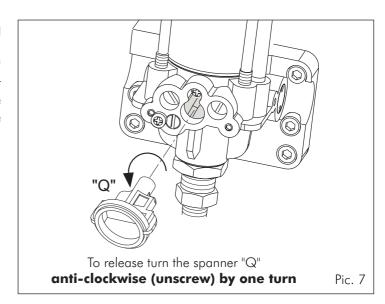

### **TECHNICAL DATA**

### **Electric Motor**

Available Power 0.37KW (0.5CV)

230V Supply Voltage Frequency 50Hz Absorbed Current 2,4A absorbed Power 510 W Capacitor 20 μF Motor Revolutions 1350 rev./1 Intermittent Service

### **Hydraulic Pump Assembly**

Average Working Pressure 2MPa (20 bars) Maximum Pressure 4MPa (40 bars)

Power Oil type OIL FADINI A 15 BY AGIP Tank Volume 2.5dm<sup>3</sup> ( 2.5 liters)

Static Weight 22.5 Kg Working Temperature -20°C +80°C Protection Standards IP 673

### **Oil-hydraulic Actuator**

Piston Inner Diameter Ø40mm Ø50mm Ø60mm Shaft Diameter Ø16mm Shaft Travel 176 - 187mm Torque (Ø40) 250 Nm Torque (Ø50) 400 Nm Torque (Ø60) 570 Nm Housing Weight Bayt 980 complete 75Kg


Beam Weight 6m


RAL 2002 red/orange Housing Colour

Top Cover Colour Metal grey Door Colour Metal grey

## Pump/actuator assembly - standard range

Pump P12 - Diameter Ø40 - Opening Time 4s Pump P6 - Diameter Ø40 - Opening Time 8s Pump P6 - Diameter Ø50 - Opening Time 14s Pump P6 - Diameter Ø60 - Opening Time 19s



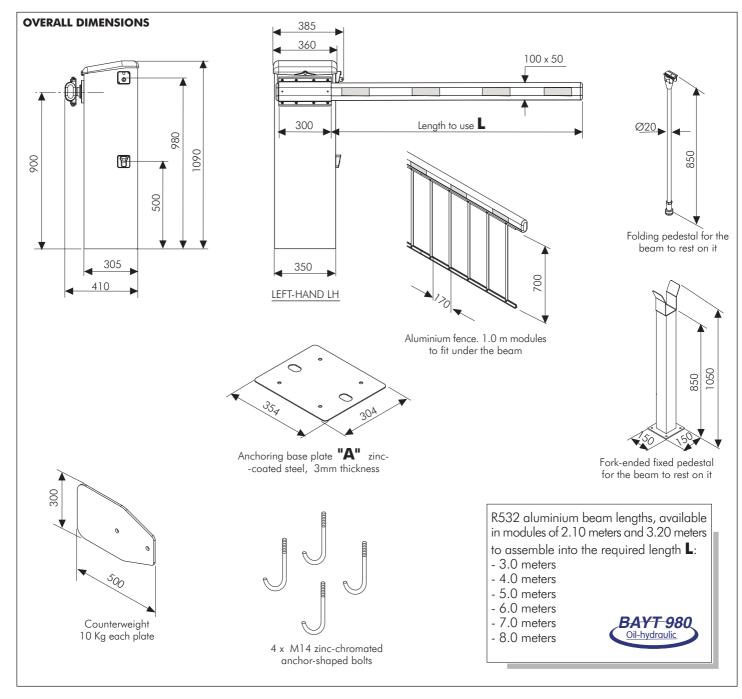

### **GENERAL WARNINGS**

- before installing the equipment carry out a Risk Analysis and fit any required device in compliance with EN 12445 and EN 12453 safety Norms
- Packaging material such as cardboard, polystyrene , nylon, etc. ... should be properly disposed of through specialized companies
- Should the operator be removed, do not cut the electric cables. These are to be removed from their respective terminals in the junction box
- Switch off the mains switch before any operation in the junction box
- The installation is to be properly grounded by using the yellow/breen wire .
- THE WARRANTY CERTIFICATE IS PROVIDED ON THE CUSTOMER'S REQUEST

It is advised to carefuly read the norms, advice and notes in the book "Safety Norms"

### **SERVICE AND MAINTENANCE:**

To achieve an optimum and longer life of the equipment and in observance of the safety regulations, it is recommended that inspections and proper maintenance are made by qualified technicians to the whole installation ie. both the mechanical and the electronic parts, as well as wiring.

- Oil-hydraulic Automation: maintenance inspection every 6 months
- Electronic parts and safety accessories: maintenance inspection monthly

The growth of MECCANICA FADINI has always been based on the development of guaranteed products thanks to our "TOTAL QUALITY CONTROL" system which ensures constant quality standards, updated knowledge of the European Standards and compliance eith their requirements, in view of an ever increasing process of improvement.

EUROPEAN MARK CERTIFYING CONFORMITY TO THE ESSENTIAL REQUIREMENTS OF THE STANDARDS 98/37/EC



the gate opener made in Italy



Via Mantova 177/A - 37053 Cerea (VR) Italy Tel. 0442 330422 - Fax 0442 331054 e-mail: info@fadini.net - www.fadini.net

Distributor's box