REMOTE PRO

PROGRAMMING INSTRUCTIONS




CAD4 UPGRADE KIT

INSTALLING YOUR NEW RECEIVER TO YOUR CAD4 MOTOR

1. TURN OFF THE POWER FROM THE POWER POINT

- 2. View the diagram below and ensure that it matches with the back of your motor.
- 3. Loosen each of the three screws 1, 2 & 3 on the back of your motor.
- 4. Connect the black receiver cable to screw 1 and tighten.
- 5. Connect the blue receiver cable to screw 2 and tighten.
- 6. Connect the brown receiver cable to screw 3 and tighten.
- 7. Turn the power back on and ensure the receiver powers up.
- 8. Your two new remotes have been pre-programmed to the receiver. Press button 1 on your new remote to ensure it can operate the door.

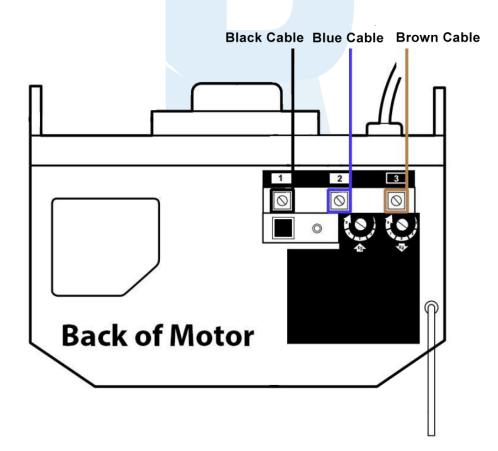

REMOTE PRO

PROGRAMMING INSTRUCTIONS



PROGRAMMING NEW REMOTES TO THE RECEIVER

Please Note: Your original remotes will continue to work

- 1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
- 2. Press and hold any button on your new remote until the LED flashes 3 times.
- 3. The remote is now coded, please test the remote to ensure it can operate the motor.
- 4. If you have more than one new remote, please repeat steps 1-3.