


Installing Receiver to ECO Garage Doors Motor

- 1. TURN OFF POWER OF MOTOR FROM THE POWER POINT**
2. View the diagram below and ensure that it matches with the back of your motor.
3. Connect the black receiver cable to the PB.
4. Connect the both blue receiver cables to GND.
5. Connect the brown receiver cable to 24V.
6. Turn power back on and ensure the receiver powers up.
7. Your two new remotes have been pre-programmed to the receiver.
Press button 1 on your new remote to ensure it can operate the door.

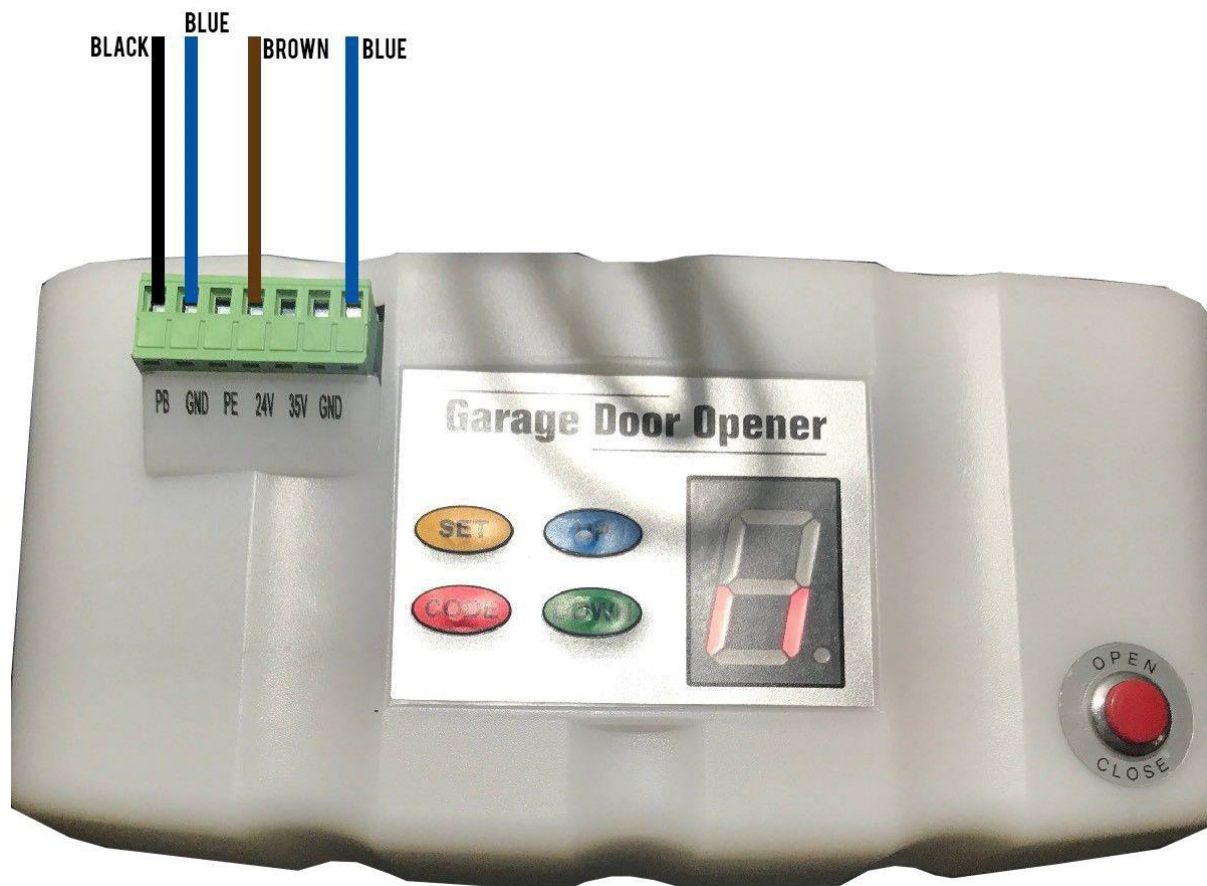

Coding new remotes

Please Note: Your original remotes will continue to work

1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
2. Press and hold any button on your new remote until the LED flashes 3 times.
3. The remote is now coded, please test the remote to ensure it can operate the motor.
4. If you have more than one new remote, please repeat steps 1-3.

www.remotepro.com.au

WARNING

To prevent possible SERIOUS INJURY or DEATH:
- Battery is hazardous: NEVER allow children near batteries.
- If battery is swallowed, immediately notify a doctor.
To reduce risk of fire, explosion or chemical burn:
- Replace ONLY with the same size and type battery
- DO NOT recharge, disassemble, heat above 100° C or incinerate
Battery will cause SEVERE or FATAL injuries in 2 hours or less if
swallowed or placed inside any part of the body.

