


## Installing Receiver to Merlin M-230T pre 2000

- 1. TURN OFF POWER FROM THE POWER POINT**
2. View the diagram below and ensure that it matches with the back of your motor.
3. Loosen each of the three screws P/B, GND and +15V on the back of your motor.
4. Connect the black receiver cable to the P/B screw and tighten.
5. Connect the blue receiver cable to the GND screw and tighten.
6. Connect the brown receiver cable to the +15V screw and tighten.
7. Turn power back on and ensure the receiver powers up.
8. All of the new remotes have been pre-programmed to the receiver.  
Press button 1 on your new remote to ensure it can operate the door.

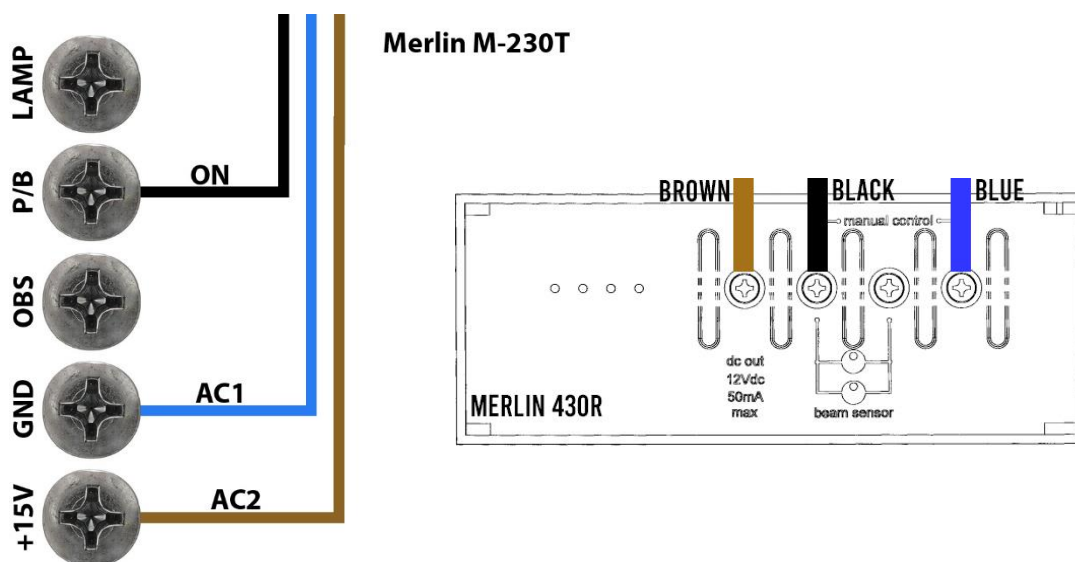

### Coding new remotes

**Please Note: Your original remotes will continue to work**

1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
  2. Press and hold any button on your new remote until the LED flashes 3 times.
3. The remote is now coded, please test the remote to ensure it can operate the motor.
  4. If you have more than one new remote, please repeat steps 1-3.

[www.remotepro.com.au](http://www.remotepro.com.au)