


Installing Receiver to ACDC Sectional

1. **TURN OFF POWER FROM THE POWER POINT**

2. View the diagram below and ensure that it matches your motor.
3. You may need to open the motor cover to see the labels of each terminal if these are not labelled on the outside.
4. Connect the black receiver cable to PBSW and tighten.
5. Connect the blue receiver cable to GND and tighten.
6. Connect the brown receiver cable to +24 and tighten.
7. Close the motor and turn power back on and ensure the receiver powers up.
8. Your two new remotes have been pre-programmed to the receiver. Press button 1 on your new remote to ensure it can operate the door.

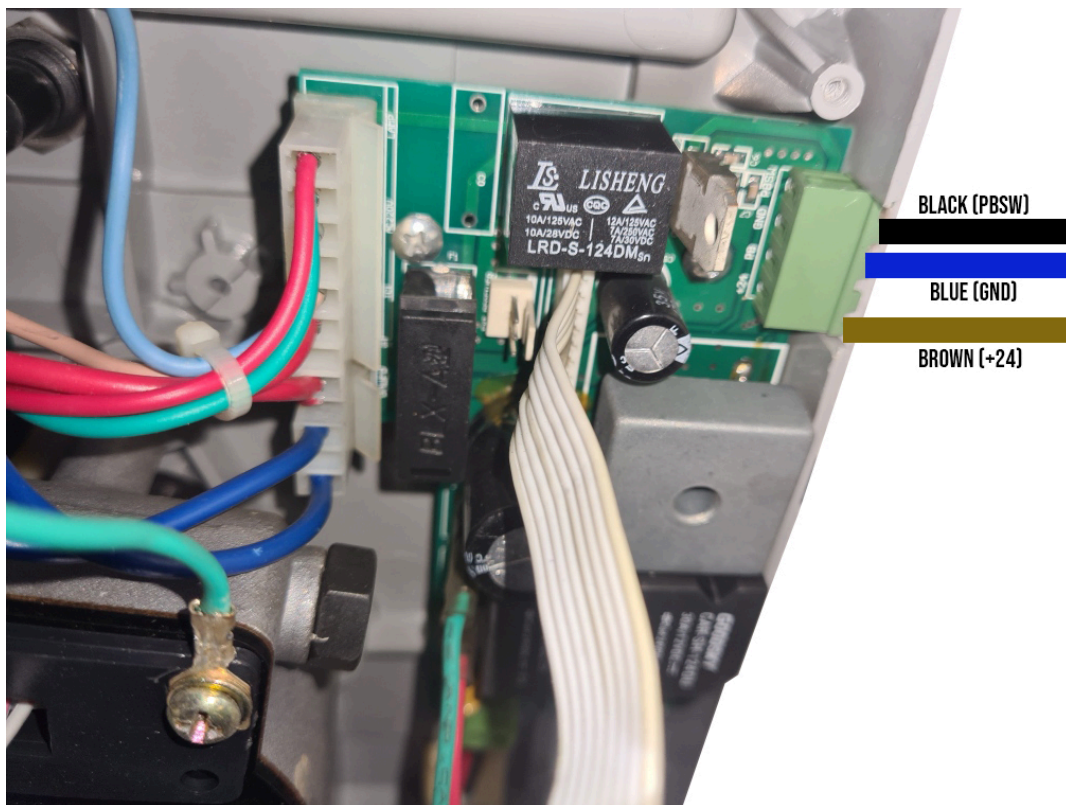

Coding new remotes

Please Note: Your original remotes will continue to work

1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
 2. Press and hold any button on your new remote until the LED flashes.
 3. The remote is now coded, please test the remote to ensure it can operate the motor.
 4. If you have more than one new remote, please repeat steps 1-3.

www.remotepro.com.au