REMOTE PRO


PROGRAMMING INSTRUCTIONS



ECO RECEIVER

INSTALLING A RECEIVER TO AN ECO GARAGE DOOR MOTOR

- 1. TURN OFF POWER OF MOTOR FROM THE POWER POINT.
- 2. View the diagram below and ensure that it matches with the back of your motor.
- 3. Connect the black receiver cable to the PB.
- 4. Connect the blue receiver cable to GND.
- 5. Connect the brown receiver cable to 24V.
- 6. Turn power back on and ensure the receiver powers up.
- 7. Your two new remotes have been pre-programmed to the receiver. Press button 1 on your new remote to ensure it can operate the door.

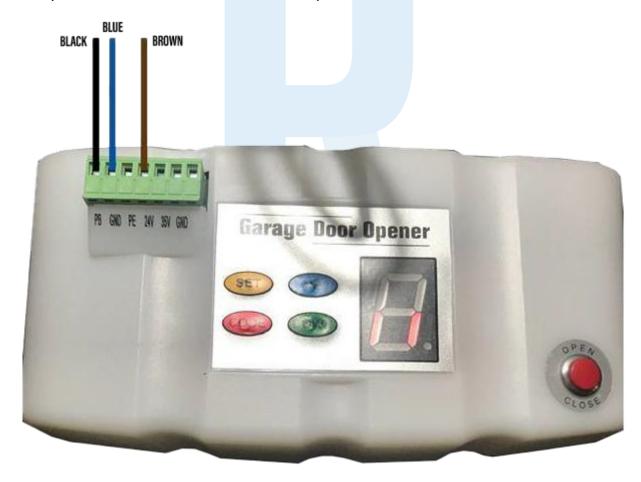

REMOTE PRO





Coding new remotes

- 1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
- 2. Press and hold any button on your new remote until the LED flashes 3 times.
- 3. The remote is now coded, please test the remote to ensure it can operate the motor.
- 4. If you have more than one new remote, please repeat steps 1-3.

