

## Installing Receiver to Longway IPR 800N Motors


- 1. TURN OFF POWER AND UNPLUG THE POWER POINT OF THE MOTOR – DO NOT PROCEED UNLESS THIS STEP IS COMPLETE**
2. Open cover of motor and insert three coloured wires of the receiver into the motor as shown in the diagram below
3. Loosen screw on motor and insert Brown cable of receiver into +24V, insert blue cable into GND, insert black cable into PW and tighten screws.
4. Ensure all cables are secured and are not loose and the receiver unit is not placed next to any light bulbs or heat sources. Plug back in the power to the motor and switch it on.
5. The remotes have been pre-programmed to button number 1. Press 1 to test the door.

### Coding new remotes

**Please Note: Your original remotes will continue to work and the new remote have already been programmed**

1. Press the and immediately release the learn 1 button inside the receiver. 2. Press and hold any button on your new remote until the LED flashes on the receiver begins to flash
3. The remote is now coded, please test the remote to ensure it can operate the motor.
4. If you have more than one new remote, please repeat steps 1-3.

[www.remotepro.com.au](http://www.remotepro.com.au)

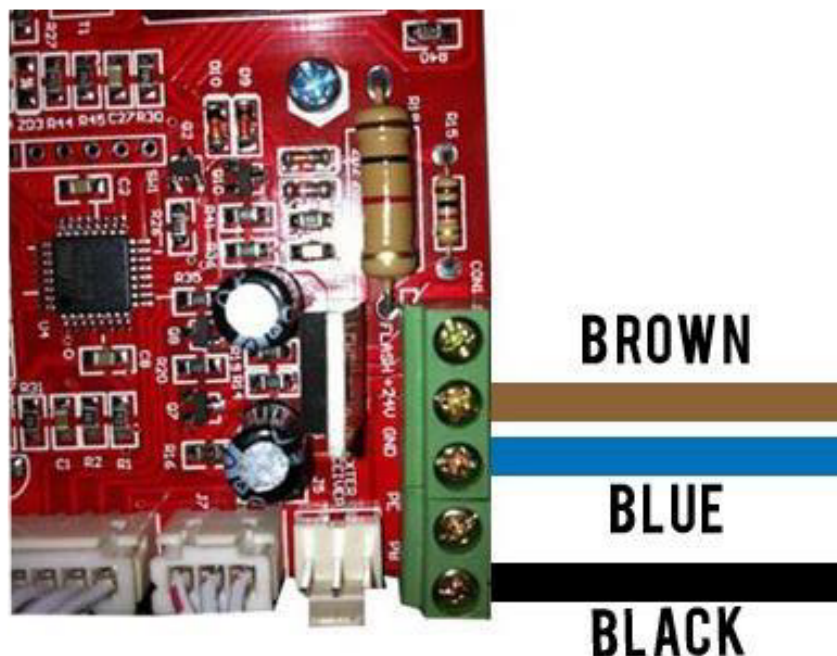

## WARNING

To prevent possible SERIOUS INJURY or DEATH:

- Battery is hazardous: NEVER allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace ONLY with the same size and type battery
  - DO NOT recharge, disassemble, heat above 100° C or incinerate
- Battery will cause SEVERE or FATAL injuries in 2 hours or less if swallowed or placed inside any part of the body.

