


## Installing Receiver to Swift 800

- 1. TURN OFF POWER AND UNPLUG THE POWER POINT OF THE MOTOR – DO NOT PROCEED UNLESS THIS STEP IS COMPLETE**
2. Unscrew and remove the cover from the motor unit.
3. View the diagram on the following page and ensure that it matches the control panel of your motor.
4. Loosen screw number 1 (numbered 1 in the diagram). Connect the brown cable from the receiver and tighten the screw.
5. Loosen screw number 3 (numbered 3 in the diagram). Connect the blue cable from the receiver and tighten the screw.
6. Loosen screw number 4 (numbered 4 in the diagram). Connect the black cable from the receiver and tighten the screw.
7. Ensure all cables are secured and are not loose. Plug back in the power to the motor and switch it on.
8. The remotes have been pre-programmed to button number 1. Press 1 to test the door.

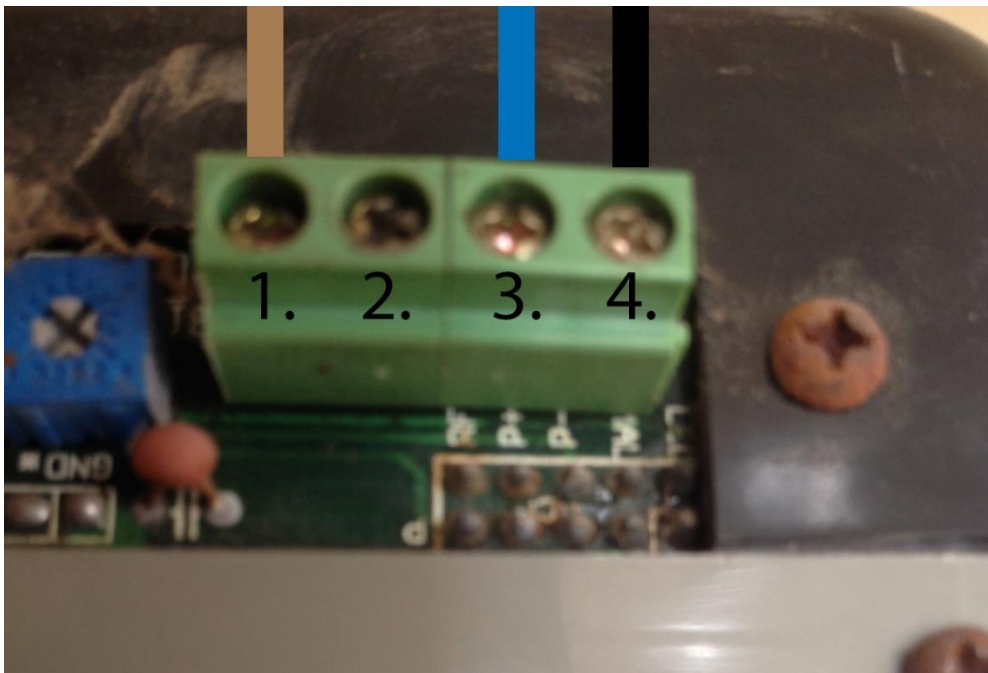

### Coding new remotes

#### **Please Note: Your original remotes will continue to work**

1. Press the black learn button inside the receiver located next to the LED light until the LED illuminates.
  2. Press and hold any button on your new remote until the LED flashes 3 times.
3. The remote is now coded, please test the remote to ensure it can operate the motor.
  4. If you have more than one new remote, please repeat steps 1-3.

**[www.remotepro.com.au](http://www.remotepro.com.au)**